

Torrey Capacity Configuration For EQB/EQM/FS

1. Turn on the module and press the next key sequence: **TARE, LIGHT, LIGHT, TARE, KG**.
2. The lines will disappear and the display will be in blank, press the **TARE** key, you will see the default capacity of the module. To change the capacity, press the **LIGHT** key to increase the value and **KG/LB** to decrease it.
3. Once you have the desired capacity, press the **ZERO** key to accept.
4. In the next message (B SMT), (USA) press ZERO key, now the configuration has finished.
(scale shows 50ok then OFF)

Turn off the scale.

NOTE: Set capacity in kg (ex: 100kg = 200lbs).

EQB 50/100 = 50

EQB 100/200 = 100

FS 250/500 = 250

FS 500/1000 = 500

EQM 200/400 = 200

EQM 400/800 = 400

EQM 1000/2000 = 1000